

Inverse Prop. Pressure-Relief Cartridge Valve, Size 1

Q_{max} = 1.5 l/min, p_{max} = 420 bar Pilot valve, seated design, direct acting Series DVSA-1LG...



- Can be used as a pilot valve
- Compact construction for cavity type AL – 3/4-16 UNF
- Operated by a proportional solenoid
- Nominal pressure when solenoid de-energised (fail-safe function)
- 5 pressure ranges available
- · All exposed parts with zinc-nickel plating
- · High pressure wet-armature solenoids
- The slip-on coil can be rotated, and it can be replaced without opening the hydraulic envelope
- Various plug-connector systems and voltages are available
- · With integral manual pressure setting
- Can be fitted in a line-mounting body

1 Description

Series DVSA-1LG... inverse-proportional pressure-relief cartridges are pilot valves with a falling pressure/current characteristic. They are nominal size 1 seat valves with a 3/4-16 UNF mounting thread. These direct acting screw-in cartridges control pressure in response to an electrical demand signal, enabling the maximum system pressure to be varied continuously and set at any desired level. When the solenoid is de-energised (initial position), the relief pressure is the nominal pressure of the applicable pressure range (fail-safe function). Any pressure at port 1 is additive to the valve setting at port 2, therefore port 1 should preferably be connected directly to tank. In control mode, the relief pressure is inversely proportional to the change in the required value (amplifier output current). In order to obtain precise pressure settings over the whole of the required pressure

range (optimum resolution), the pressure relief cartridges are available in 5 pressure ranges. If a proportional solenoid is faulty, for example, the integral manual pressure setting enables the required pressure to be set mechanically. Inverse proportional pressure-relief cartridges are primarily used as pilot valves, mainly in mobile and industrial applications. All external parts of the cartridge are zinc-nickel plated to DIN 50 979 and are thus suitable for use in the harshest operating environments. The slip-on coils can be replaced without opening the hydraulic envelope and can be positioned at any angle through 360°. If you intend to manufacture your own cavities or are designing a line-mounting installation, please refer to the section "Related data sheets".

2 Symbol



3 Technical data

General characteristics	Description, value, unit
Designation	inverse proportional pressure-relief cartridge
Design	pilot valve, seated design, direct acting
Mounting method	screw-in cartridge 3/4-16 UNF
Tightening torque	40 Nm ± 10 %

Reference: 400-P-580201-EN-01

Issue: 05.2020 1/6



General characteristics	Description, value, unit
Size	nominal size 1, cavity type AL
Weight	0.40 kg
Mounting attitude	unrestricted (preferably vertical, coil down)
Ambient temperature range	-25 °C +50 °C

Hydraulic characteristics		Description, value, unit
Maximum operating pressure	- main port 2 - port 1	420 bar 250 bar ¹⁾
Maximum flow rate		1.5 l/min
Nominal pressure ranges		40 bar,100 bar,160 bar,250 bar,350 bar
Flow direction		$2 \rightarrow 1$, see symbols
Hydraulic fluid		HL and HLP mineral oil to DIN 51 524; for other fluids, please contact BUCHER
Hydraulic fluid temperature range		-25 °C +70 °C
Viscosity range		15380 mm ² /s (cSt), recommended 20130 mm ² /s (cSt)
Minimum fluid cleanliness Cleanliness class to ISO 4406 : 1999		class 18/16/13



ATTENTION!


1) To prevent any pressure surges, port 1 must be routed to tank with the least possible backpressure. Any tank pressure acting at port 1 is additive to the pressure setting at the main port 2.

Electrical characteristics	Description, value, unit
Supply voltage	12 V DC, 24 V DC
Control current	12 V = 01400 mA, 24 V = 0760 mA
Power consumption at max. control current	max. 19 W
Coil resistance R - cold value at 20 °C - max. warm value	12 V = 5.8Ω / 24 V = 21Ω 12 V = 8.6Ω / 24 V = 32Ω
Recommended PWM frequency (dither)	200 Hz
Hysteresis with PWM	24 % I _N
Reversal error with PWM	24 % I _N
Sensitivity with PWM	< 1 % I _N
Reproducibility with PWM	< 2 % p _N
Relative duty cycle	100 %
Protection class to ISO 20 653 / EN 60 529	IP 65 / IP 67 / IP 69K, see "Ordering code" (with appropriate mating connector and proper fitting and sealing)
Electrical connection	DIN EN 175301-803, 3-pin 2 P+E (standard) for other connectors, see "Ordering code"




4 Performance graphs measured with oil viscosity 33 mm²/s (cSt)


p = f (I) Pressure-adjustment characteristic (at Q = 0.3 l/min)

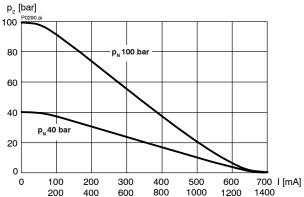


p = f(I) Pressure-adjustment characteristic (at Q = 0.3 l/min) p_2 [bar]

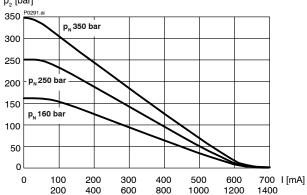


p = f(Q) Pressure v. Flow rate characteristic $p_N = 40$ bar

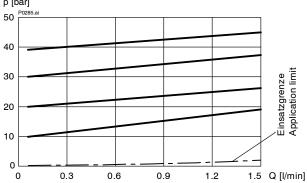


p = f(Q) Pressure v. Flow rate characteristic $p_N = 100$ bar

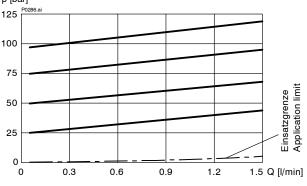


p = f (Q) Pressure v. Flow rate characteristic p_N = 160 bar p [bar]

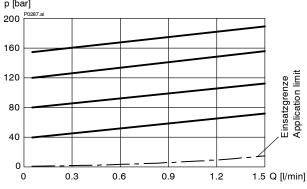

p = f(Q) Pressure v. Flow rate characteristic $p_N = 250$ bar

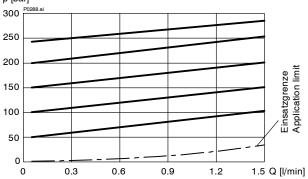



p = f (Q) Pressure v. Flow rate characteristic p_N = 350 bar p [bar]

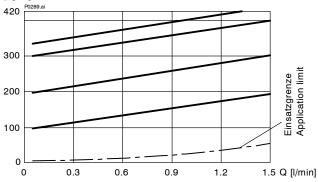



5 Dimensions & sectional view

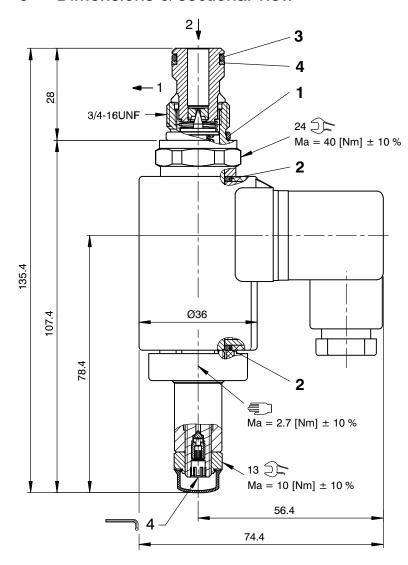

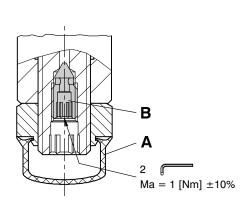

Seal kit NBR no. DS-355-N 1)

Item	Qty.	Description	
1	1	O-ring no. 017 Ø 17,17 x 1,78 N90	
2	2	O-ring Ø 16,00 x 2,00 Viton	
3	1	O-ring no. 014 Ø 12,42 x 1,78 N90	
4	1	Backup ring Ø 10,70 x 1,45 x 1,00 FI0751	



IMPORTANT!

1) Seal kit with FKM (Viton) seals no. DS-355-V

Integral air-bleeding

If necessary, air can be purged from these proportional pressure-relief cartridges by using the integral air-bleed screw (Item B). The procedure is as follows:

A Protective cap

B Air-bleed screw

Steps:

- 1. Remove the protective cap.
- 2. Slacken the air-bleed screw approx. 2 turns.
- 3. Switch the pressure-relief cartridge ON/OFF several times until no more air bubbles escape.
- 4. Tighten the air-bleed screw (Ma = 1 Nm \pm 10%).
- 5. Fit the protective cap.



6 Installation information



IMPORTANT!

To achieve the maximum performance rating, fit the solenoid coil as shown (with the plug pins at the bottom) and install the valve in a steel body. When fitting the cartridges, note the mounting attitude (preferably vertical, with coil down \rightarrow automatic air bleed) and use the specified tightening torque. No adjustments are necessary, since the cartridges are set in the factory.



ATTENTION!

To prevent any pressure surges, port 1 must be routed to tank with the least possible back-pressure. Any tank pressure acting at port 1 is additive to the pressure setting at the main port 2.



ATTENTION!

Only qualified personnel with mechanical skills may carry out any maintenance work. Generally, the only work that should ever be undertaken is to check, and possibly replace, the seals. When changing seals, oil or grease the new seals thoroughly before fitting them.


7 Manual pressure setting

These inverse proportional pressure-relief cartridges are equipped as standard with an integral manual pressure setting. If a proportional solenoid is faulty, for example, this manual pressure setting enables the required pressure to be set mechanically. The manual pressure setting can also be used to make minor pressure adjustments directly at the system.



IMPORTANT!

Any changes to the manual pressure setting have a direct effect on the factory settings.

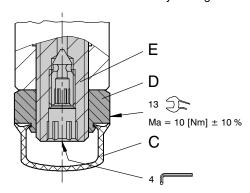

- C Protective cap
- D Lock nut (13 A/F)
- E Adjusting spindle for pressure setting

Setting the pressure manually

Steps:

- 1. Remove the protective cap.
- 2. Slacken the lock nut (13 A/F).
- Unscrew (turn to left) the adjusting spindle (4 A/F) until the required pressure is set.
- 4. Tighten the lock nut (13 A/F).
- 5. Fit the protective cap.



ATTENTION!

To reset the inverse proportional pressure-relief cartridges to their initial position (the factory setting), a constant flow rate and a pressure gauge that measures the pressure in the main port 2 are needed. The pressure setting must not exceed the nominal pressure of the pressure range in use. The procedure is as follows:


Restoring the factory settings

Steps:

- 1. Solenoid de-energised.
- 2. Remove the protective cap.
- 3. Slacken the lock nut (13 A/F).
- Unscrew the adjusting spindle (4 A/F) to its end-stop, then screw it in until the pressure on the gauge reaches the nominal pressure (pN) of the pressure range in use.
- 5. Tighten the lock nut (13 A/F).
- 6. Fit the protective cap.



8 Ordering code

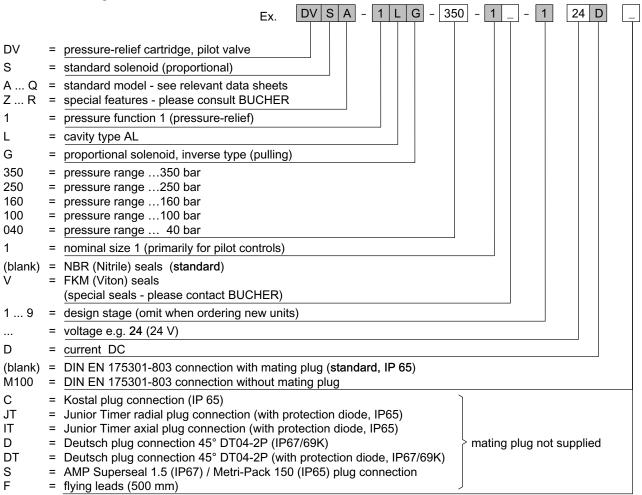

9 Related data sheets

Reference	(Old no.)	Description
400-P-040011	(i-32)	The form-tool hire programme
400-P-040171	(i-33.10)	Cavity type AL
400-P-120110	(W-2.141)	Coils for screw-in cartridge valves
400-P-510101		Amplifier unit for proportional valves (1-channel) PBS - 3A
400-P-720101	(G-4.10)	Line-mounting body, type GALA (G 3/8")

info.ch@bucherhydraulics.com

www.bucherhydraulics.com

© 2020 by Bucher Hydraulics AG Frutigen, CH-3714 Frutigen

All rights reserved.

Data is provided for the purpose of product description only, and must not be construed as warranted characteristics in the legal sense. The information does not relieve users from the duty of conducting their own evaluations and tests. Because the products are subject to continual improvement, we reserve the right to amend the product specifications contained in this catalogue.

Classification: 430.305.300.305.300.310